

# Installation Guide: Top Capping




**The GARDEN  
TRELLIS Co.**  
Est. 1992  
Crafted garden joinery

## TRELLIS:

Align with the front edge of the post and screw down through the capping and into the top of the panel frame using 4.5mm / 5mm x 100mm stainless steel screws (this can be plugged and filled if preferred).

(View from above)

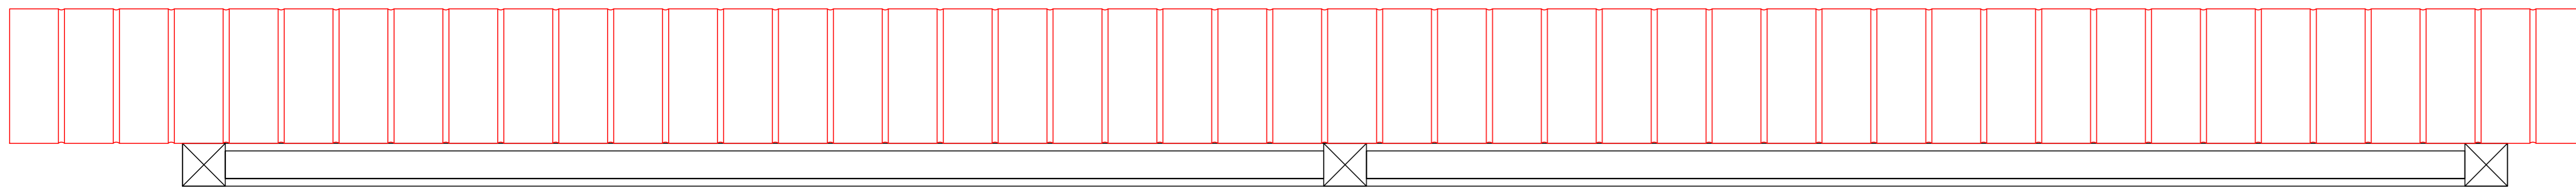

If installing top capping:

## SLATTED:

Align with front slat of panel and screw down into top of posts and centre vertical (if possible) using 4.5mm / 5mm x 100mm stainless steel screws (this can be plugged and filled if preferred).

(View from above)

